 
DISENGAGE WOCD

ENGAGE WOCD






Step 4: The sash can pass through




the tongue at the same time the direction shown, press down Step 3: Pull the button in

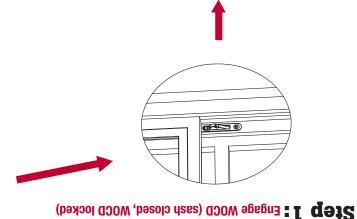

by the WOCD Step 2: Open the sash and the sash is stopped

581526 _05012018

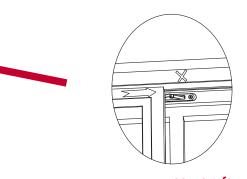

Provide to Homeowner

704.283.7459 • 800.205.5665 www.windsorwindows.com

2210 Stafford Street Extension • Monroe, NC 28110

515.223.6660 • 800.218.6186

900 South 19th Street • West Des Moines, IA 50265



Glide-By WOCD Safety and Operation Instructions




IMPORTANT SAFETY INFORMATION

PLEASE LEAVE SAFETY INFORMATION FOR THE OCCUPANT GLIDE-BY WINDOW OPENING CONTROL DEVICE




WARNING

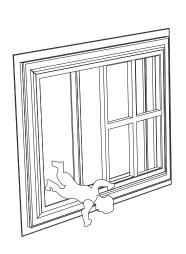


POSSIBLE FALL HAZARD

- 1. Follow manufacturer's assembly and installation instructions carefully. Failure to do so may result in accidental falls.
- 2. This WOCD is designed to protect against accidental window falls by children five years and younger.
- 3. This WOCD is not a substitute for careful supervision of young children.
- 4. Keep WOCD engaged unless needed for an emergency.

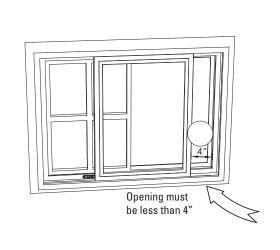

- 1. Use only recommended materials & techniques.
- 2. Make sure WOCD is securely attached to the window.
- 3. Make sure the window frame is in a good condition.
- 4. Install WOCD so that a rigid sphere 4 inches in diameter cannot pass through the lowest portion of the window opening.

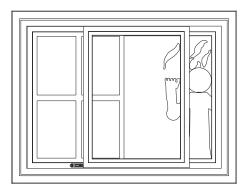

NO WINDOW RESCUE ABOVE 75 FEET (6TH FLOOR)

- 1. Fire rescue ladder may not reach beyond 75 feet (6th floor).
- 2. Do not rely on being rescued from windows above 75 feet (6th floor) follow building fire escape plan.

BLOCKS ESCAPE IN FIRE AND EMERGENCY UNLESS RELEASED

- 1. Follow enclosed instructions to operate WOCD to open window.
- Never apply padlocks or devices that require a key or tool to unlock them to the WOCD.